Goniometer Calibration

Zero calibrate

Close the goniometer (as shown in the illustration), place it on a flat surface with the "stop" screw up, and click on the "Zero" button.



Arms closed for Zero Calibration

Full Calibrate

Open the goniometer arms straight out, place it on a flat surface with the "stop" screw up, and click on the "Calibrate" button.

0 .

Arms Open for Full Calibration