

## **Onsite Calibration**

To complete step 1, support the OnSite gauge at each handle and remove all weight from the transducer and click on the "Zero Calibrate" button.



### **Zero Calibration**

To complete step 2, enter the amount of weight to be added. Attach the weight to the transducer and click on the "Weight Calibrate" button. Ensure the weight is applied to end of the transducer labeled as "Force Input"



### **Weight Calibration**